



Daily / Regular Maintenance

1. Sweep, dust mop or vacuum the floor daily to remove dust, dirt, grit and debris that can damage the LVT/LVP and become ground into the surface.
2. Spot mop as needed. Any spills should be cleaned up immediately.
3. Damp mopping of the LVT/LVP should be performed on a regular or daily basis depending upon traffic and soil levels in the area. Use a properly diluted neutral detergent cleaning solution.